


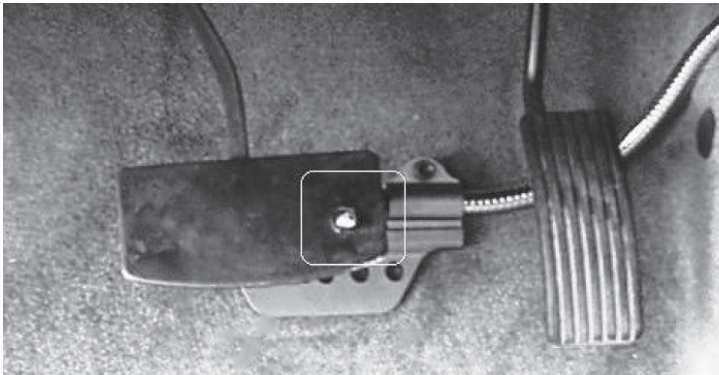

INSTALLER CHEAT SHEET




Swivel Pulley Assembly (driver side)

Fasten with one bolt.

Cable


- 1) Remove rubber brake pad cover.
- 2) Drill small, recessed hole.
- 3) Thread cable through hole until it catches on ball stop.
- 4) Replace rubber cover

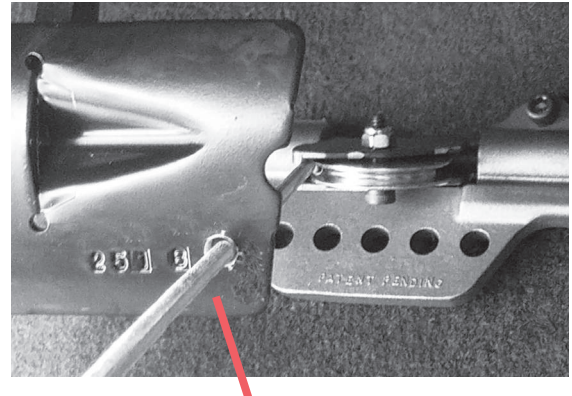

Here is an easy way to align the cable with the pulley. Simply run a straight rod through the hole on the driver's side brake pedal and into the back of the pulley where the cable would run.

Caution

If your vehicle is equipped with adjustable gas and brake pedals, **disable feature** prior to adjusting cable lock block.

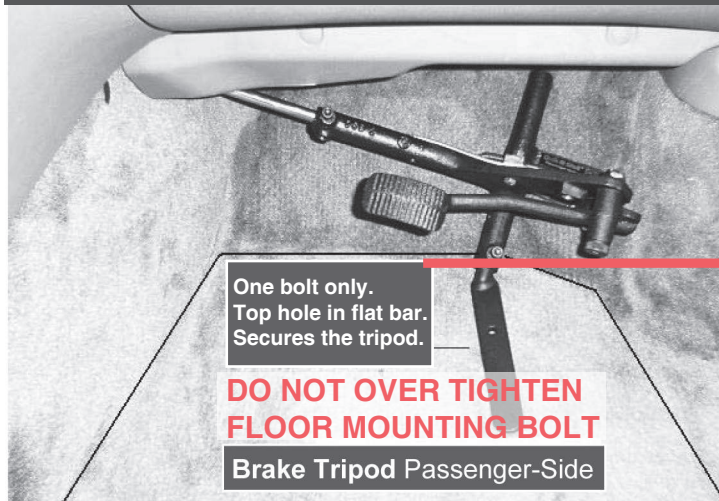

IMPORTANT Brake Pedal Adjustment

Position brake pedal horizontally, or *slightly* above.

Adjust height by releasing cable lock-block to free cable.

The instructor should be able to pivot from foot rest to brake without lifting the heel from the floor.

